


SHADE BUCKLE

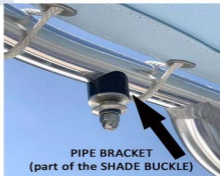

Consists of:

1) Flat stainless steel buckle 2) Stud 3) Delrin™ high density pipe adapter

Primary use: to attach aft shade to the boat, either T-Top or Hard Top. Can also be used on boat covers.

There are various ways to attach a sun shade or aft shade to a boat.

- Use straps around the T-Top
- Use a padeye or footmans loop (looks unsightly)
- Track (needs to be installed and requires many drilled holes)
- OUR NEW SHADE BUCKLE: REQUIRES ONLY ONE HOLE PER SIDE**

INSTALLATION: Install the stud in either the pipe or the hard top. Preference is with a nut and bolt. You can then attach a webbing strap from the shade to the buckle and then slide the buckle over the stud till it locks in place. Tension up the webbing strap.

